

# FX-Ragbolt Cage Assembly Guide

Please read all instructions carefully




## Materials in Package




01 : Threaded rod with welded nuts ( 3 pcs )



02 : Ring Spacer Tubes ( 6 pcs )

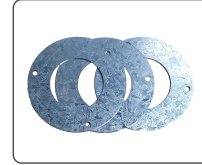

03 : Foundation cage rings ( 3 pcs )

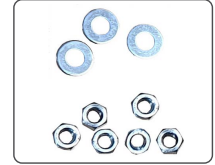

04 : Leveling washers and nuts

## Step 1

Take the threaded rods and insert through the first Halo foundation cage ring. The first foundation cage ring should sit on top of the welded nuts.



## Step 2

Take three of the ring spacer tubes and slide them onto the spacer rod, followed by another foundation cage ring.



## Step 3

Repeat step 2, then thread nuts onto the threaded rod and tension, the foundation cage should be rigid. Thread on the leveling nuts followed by the washers.



## Step 4

Cast the foundation cage into the excavated footing ensuring a minimum of 50mm of threaded rod is exposed. After the cement has cured place the baseplate of the Halo Vandal Resistant Solar Bollard over the leveling nuts and washers. Use a level to ensure the bollard stem is vertical. Fit and tension the locking nuts or security fixings (by others)

